

OWNER'S MANUAL

RADIO BOOST CD



OVERVIEW


SETTINGS



OVERVIEW

OVERVIEW

SETTINGS

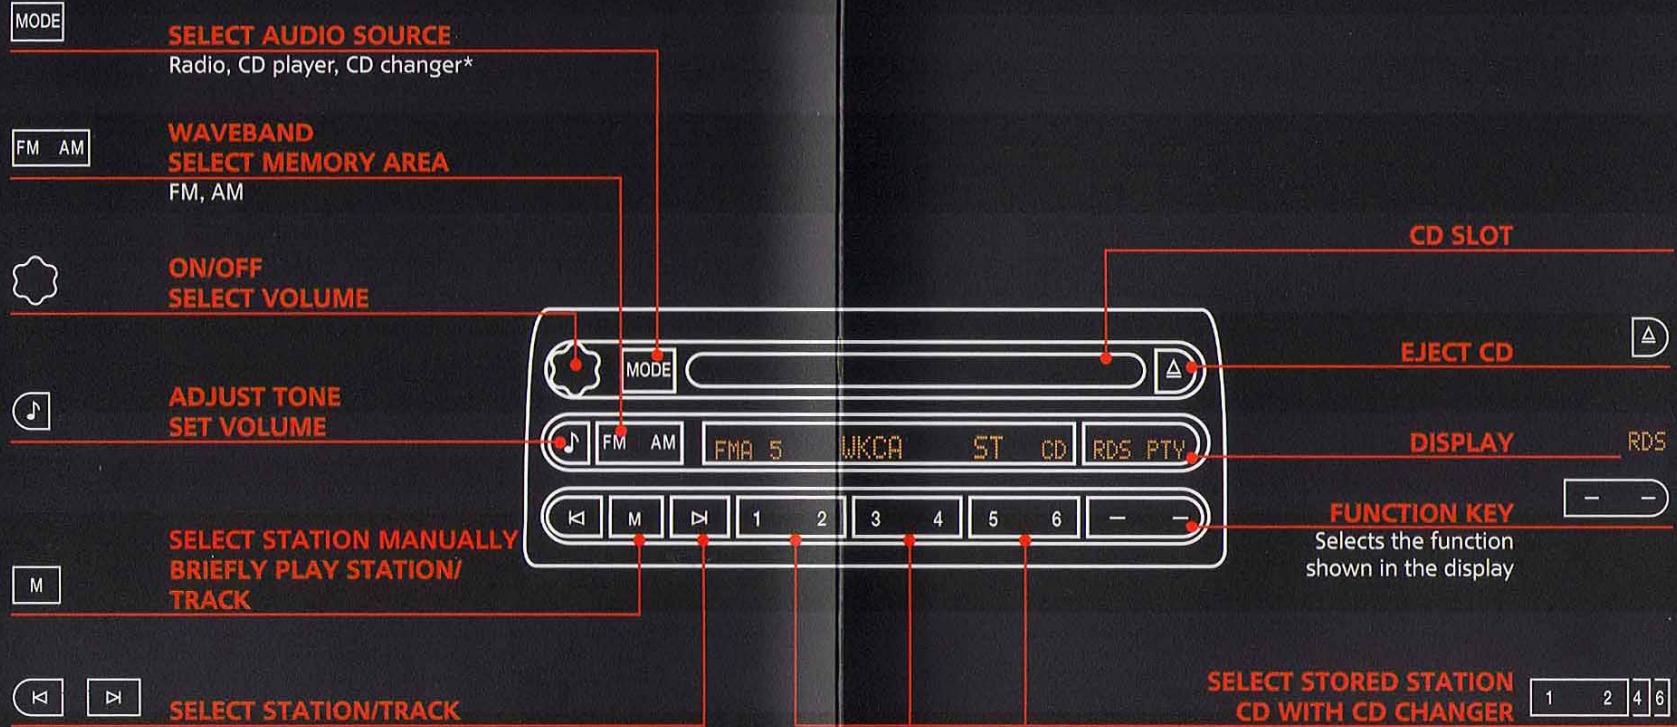

* Indicates special equipment, country-specific equipment and optional extras, as well as equipment and functions not yet available at the time of printing.

Your MINI center is always happy to answer any questions you may have.

© 2004 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich

Order No. 01 41 0 158 364

US English VII/04

Printed in Germany

 
SETTINGS

SETTINGS

ADJUST VOLUME

SPEED

Volume increase dependent on speed
With Harman/Kardon* speaker system,
automatic adjustment



NAVIGATION

Minimum volume for voice instructions



RESET SETTINGS

Reset to midrange setting



ADJUST TONE

Lows (BASS), highs (TREBLE), volume distribution
front/rear (fader), left/right (balance)



ADJUST SPEAKER SYSTEM*

Select Harman/Kardon tone simulation
and surround-sound effects, sample effects



OPTIMIZE TONE

With Harman/Kardon: Tone is optimized on
the driver's side



RESET TONE SETTINGS

Reset to midrange setting



SELECT WAVEBAND/MEMORY AREAFM: FM1, FM2, FMA
AM: AM, AMA

[FM AM] ▷ FM1 ▷ FM2 ▷ FMA

Press briefly

[FM AM] ▷ AM ▷ AMA

or Press briefly

SELECT STATION

[◀ ▶]

Press briefly

SELECT STATION MANUALLY

[M] ▷ MAN

Press briefly

[◀ ▶]

Press briefly

STORE CURRENT STATION

Six stations can be stored per memory area.

Select memory area

→ Select station

[1 2 4 6]

Press long (1 - 6)

Station can be heard again following a brief interruption.

STORE AUTOMATICALLY

The 6 strongest stations are automatically stored.

Select FM memory area

[FM AM] ▷ AUTOSTORE

Press long

Select AM memory area

[FM AM] ▷ AUTOSTORE

Press long

CALL STORED STATION

Select memory area

[1 2 4 6]

Press briefly (1 - 6)

BRIEFLY PLAY STATION ON/OFF

Briefly listen to all receivable stations

[M] ▷ SC

Press long

When switching off, the last station briefly played is retained.

RDS ON/OFF

Transmits additional information in the FM waveband, e.g. station name

[RDS] ▷ RDS ON / RDS OFF

On/Off is briefly confirmed

Press briefly

REGIONAL PROGRAMS ON/OFF

Transmits certain regional programs in the FM waveband

[RDS] ▷ REG ON / REG OFF

On/Off is briefly confirmed

Press long

DISPLAY PROGRAM TYPE (PTY)

Reception of additional information

[PTY] ▷ NEWS / NO PTY

Program type is displayed

Press briefly

AUTOMATIC PTY DISPLAY

Automatic display of station type

[PTY] ▷ PTY AUTO

Press long

OFF [PTY] ▷ PTY MAN

Press long

**START CD PLAYER**

CD with labeled side up

Insert CD

CD player starts

or

[MODE] ▶ TR

Press briefly several times

START CD CHANGER*

[MODE] ▶ cdc2 TR01

Press briefly several times

1 2 4 6

Select CD

MP3 - NEXT FOLDER

Switching between folders with compressed audio files

[M] ▶ MPN

Press briefly

◀ ▶

Press briefly

NEXT TRACK

◀ ▶

Press briefly

FORWARD/REVERSE

◀ ▶

Press long

RANDOM ORDER ON/OFF

Play all tracks of a CD using random playback

RND
- - ▶ RND

Press briefly

RND
- - ▶ RPT

Press long

BRIEFLY PLAY TRACKS ON/OFF

Briefly play all tracks

[M] ▶ SC


Press long

When switching off, the last track briefly played will be retained.

FILL CD MAGAZINE*

The changer is located in the luggage compartment at the rear right.

Push lid toward right

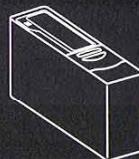Press button
Remove magazine

Insert CD with labeled side up



- Do not operate CD player with damaged cover, as otherwise serious eye injuries can result.
- Do not use CDs with labels applied after purchase, as otherwise labels can detach during playing and damage the system.
- Only use round CDs with a standard diameter of 4.7 in (12 cm) and do not play CDs with an adapter, e.g. single CDs, as otherwise the CDs or the adapter may jam.

Do not use combined CD/DVDs, as otherwise these may jam.
CDs with copy protection may only permit restricted playback. In this case, contact the dealer or manufacturer of the CD.